



4287-B SE International Way  
Milwaukie, OR 97222 USA  
Telephone: (503) 659-6100  
FAX: (503) 654-4422  
Technical Support: (800) 323-4548  
Email: [support@ecd.com](mailto:support@ecd.com)  
Internet: <http://www.ecd.com>


# SideRider™

## Operation Instructions

### Getting Started

---

Side Rider™ components are built of high quality materials for reliable operation and long life. The Side Rider™ kit includes a carrier with an expansion arm.

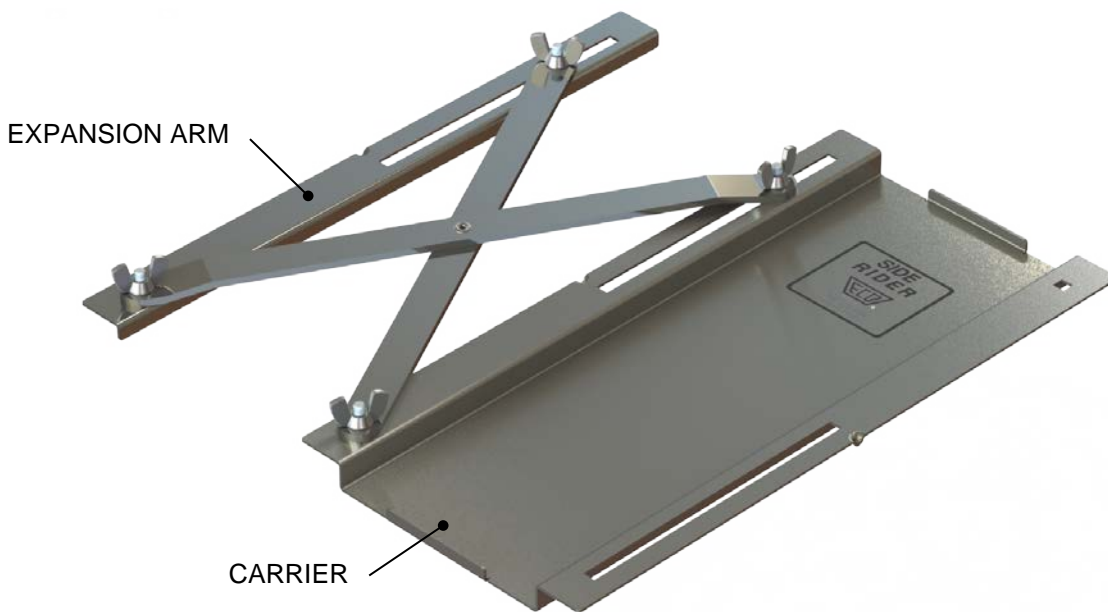

*Figure 1: Side Rider™ Components*



The Side Rider™ may interfere with some oven center supports. Prior to operation, make sure the support is clear of the Side Rider™ path. If the center support cannot be cleared, this product should not be used.


## Set the Side Rider™ width

---

- 1) Loosen the wing nuts to adjust the expansion arm to match the width of the machine pin rails.



To avoid getting the Side Rider™ hung in the machine, make sure the width is slightly less than the space between the pin rails.

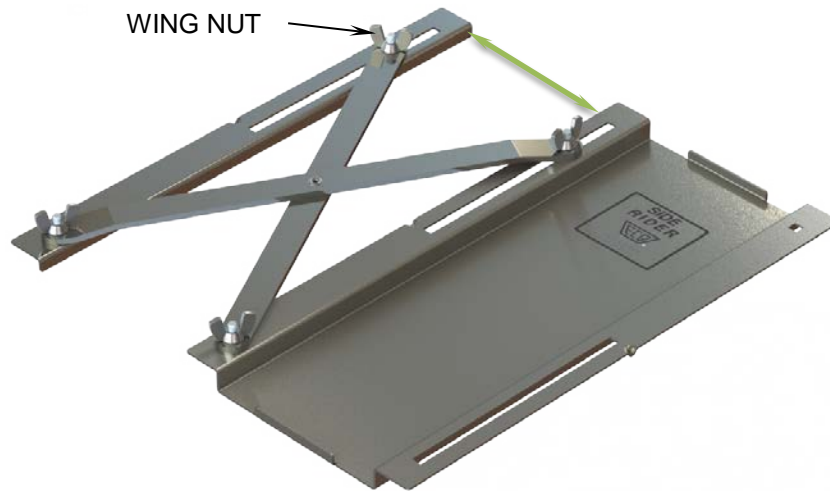


*Figure 2: Width adjustment*

- 2) Tighten wing nuts to lock the expansion arm into position.

## Optional Expansion Arm

---

The Side Rider™ is designed to incorporate an optional expansion arm for use with wide test assemblies. (Contact ECD, Inc. Sales department for ordering information)

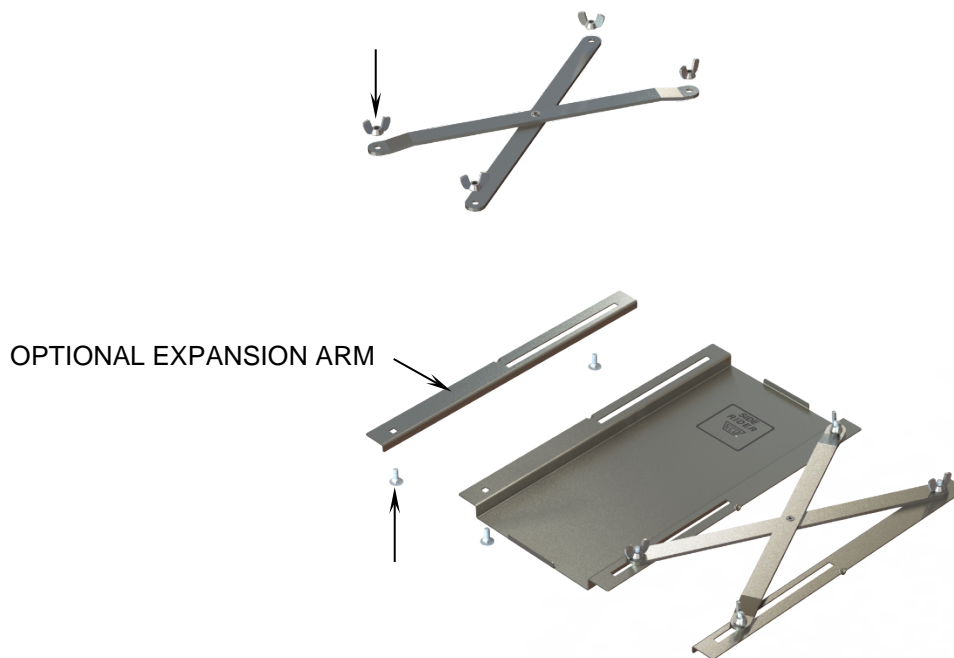

*Figure 3: Optional expansion arm*